

Pro-Line Undertray for Slash® #3311-60

Illustration #1



Illustration #2



Illustration #3



1. Using Lexan scissors cut along the scribed lines and Remove the excess material from the undertray. (illustration #1)

2. Drill out the four front bumper screw holes and four rear skid plate screw holes. You will also need to drill the four holes for the side body supports. (See illustration #2)

3. Dill out the marked locations on the side of the undertray. Using lexan scissors or a hobby knife cut along the arched line this will allow the passage of the side mount during installation. (illustration #3)

4. Remove the four front bumper screws and four rear skid plate screws from you slash truck. You will also need to remove the body side supports and set them to the side. (illustration #4)

5. Insert the front of the undertray under the front bumper and lay the undertray into position so the front and rear are aligned with the chassis holes. Using the screws previously removed secure the undertray.

6. To attach the side post supports you will have to push it through the side of the undertray using the slot previously cut out. Bending the upper portion of the slot will help the support attach to the chassis. Using the screws removed re-attach the side support while bolting down the undertray at the same time. Upon completion your side supports should look like illustration #5.

Illustration #4

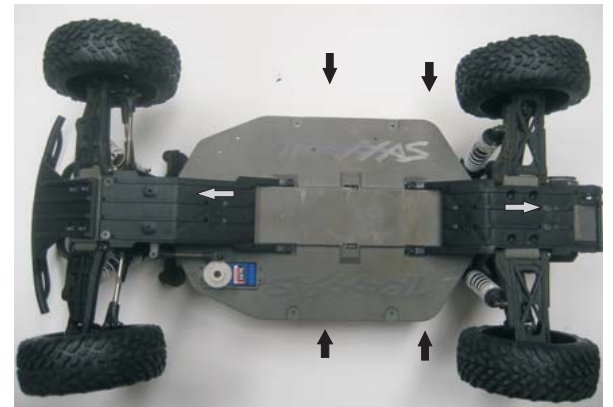


Illustration #5



PRO-LINE
PROLINERACING.COM