


7

PRO-LINE

Gluing Area (Inner bead)

Lip
(outer bead)

Lip
(outer bead)

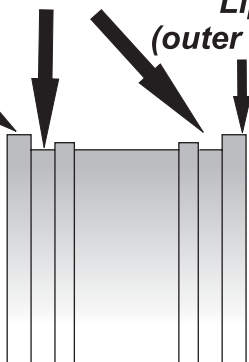


Chrome Removal Instructions


For best tire mounting results, remove chrome finish from the lip of wheel. Use 100 grit sand paper or remove carefully by scraping off with a sharp hobby knife.

Attention All-Purpose wheel owners:

It is important that you do not over tighten the wheel adaptor screws when mounting.

2

 Pull back bead of tire so that the inner bead is exposed (see figure in step 1 for glue area reference). Place a drop of glue on wheel. Repeat process until entire bead has been glued.

 Once the inner bead is glued, gently pull back outer bead of tire. Place any needed glue on exposed areas and let dry.

Additional Important Information:

These wheels were designed for ongoing abuse. They are made of a super-tough nylon ensuring less breakage and greater durability. The chrome process, however, is for appearance only. **This chroming process is not chip resistant and will chip off under normal use.** Please note that any chroming issues will not be warranted.

Thank you for purchasing Pro-Line products.